


SMOOTH DOWNLIGHT 4"

Install Guide and Manual

COMPONENTS



EASY INSTALLATION




Turn Power OFF

1. Turn off circuit breaker that provides power to the light switch for the recessed lights.



4" Housing


2. Locate the housing.
 •Remove previous fixture, fixture may be hot so allow time to cool after turning off power.
 3. Ensure the size of the opening is 4".

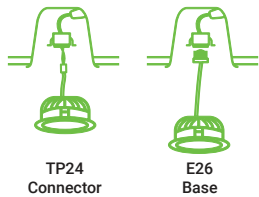

TP24 Connector

E26 Base

4. Determine the type of connector available.
 •TP24 Connector
 •E26 Base

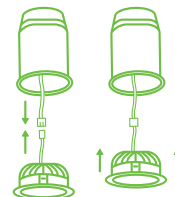

5. Thread the appropriate adapter to make connection in the housing.
 •Note: the wires may come lose from the coonectors so ensure they are attached.
 6. Tuck all wires into the can.
 7. Line up trim ring with opening.



8. Push downlight into can until secure. Compression clips will hold retrofit light in place.



Turn Power ON

9. Turn on circuit breaker and test light.

WARNING

All electrical connections must be in accordance with local and National Electric Code (N.E.C.) standards. Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections. Please review these instructions carefully before proceeding.

WARNING: Risk of fire or electric shock. Do not alter, relocate or remove wiring during installation.

WARNING: Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation

SPECIFICATIONS

Voltage	120V
Wattage	11W
Suitable for Locations Ingress	Damp
Housing	Polycarbonate
Weight	0.33lbs
Warranty	7 years