


# INSTALLATION INSTRUCTIONS


- Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us;  
Call: (302)336-8180  
Email: vanityinservice@gmail.com
- Protect all surfaces from sharp objects , high heat sources,direct prolonged sunlight and chemical hazards .
- Professional installation is recommended !

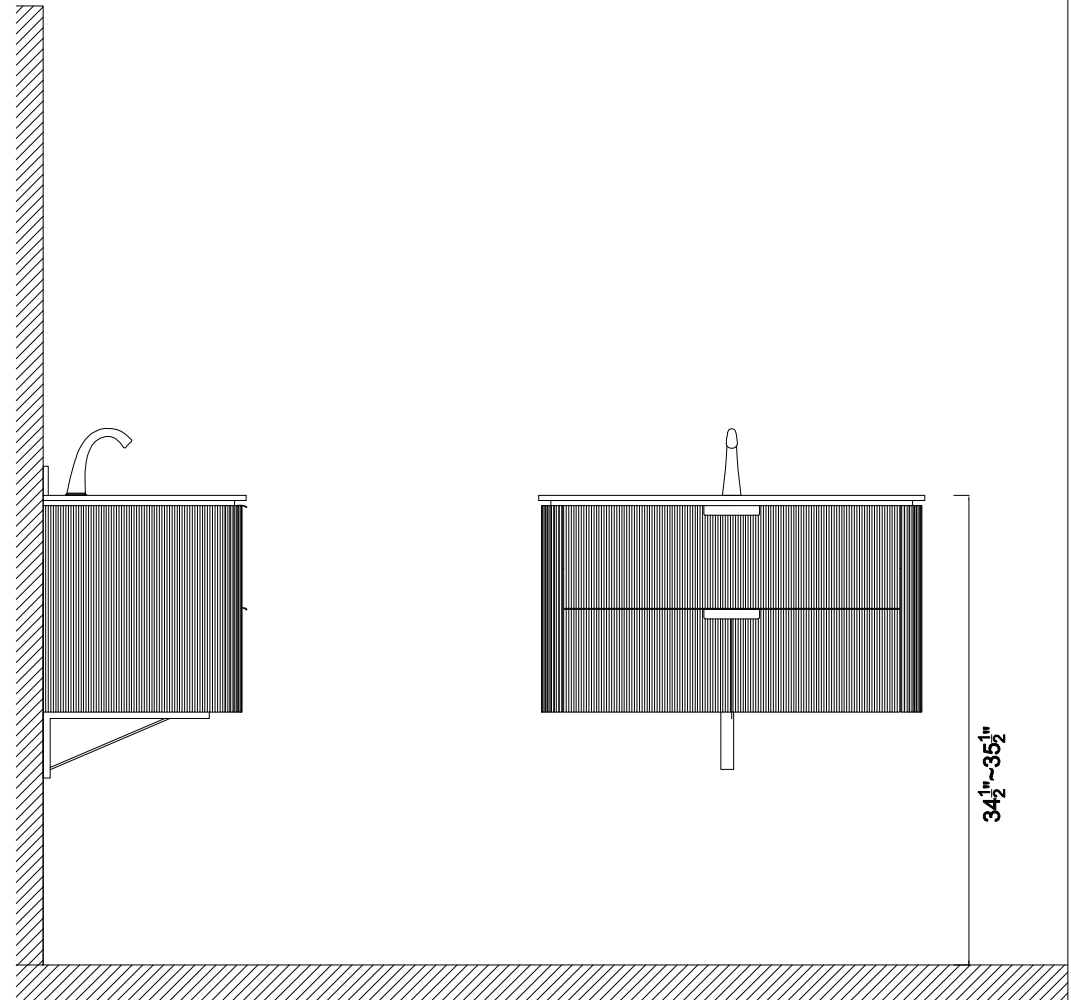


# INSTALLATION INSTRUCTIONS

## PACKING LIST


**A Main Vanity**  
1 PC

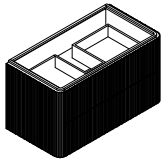

**B Top**  
1 PC

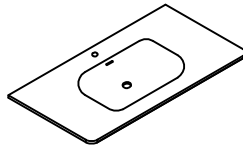


**C Wood Cleat**  
1 PC

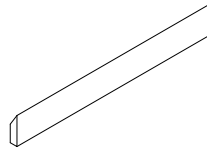


**D Metal Bracket**

24": 1pcs  
30": 1pcs  
36": 1pcs  
48": 2pcs  
60": 2pcs



**E Wood Screw**


24": 5pcs  
30": 5pcs  
36": 5pcs  
48": 8pcs  
60": 8pcs

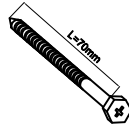

M5 x 70

**F Screw**

24": 3pcs  
30": 3pcs  
36": 3pcs  
48": 6pcs  
60": 6pcs

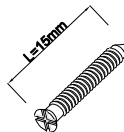

M4 x 15

**G Wall Anchor**

24": 5pcs  
30": 5pcs  
36": 5pcs  
48": 8pcs  
60": 8pcs




**H Metal Washers**

24": 5pcs  
30": 5pcs  
36": 5pcs  
48": 8pcs  
60": 8pcs




**I Handle**

24": 5pcs  
30": 2pcs  
36": 2pcs  
48": 4pcs  
60": 6pcs




## TOOLS REQUIRED

**Drill Bits**

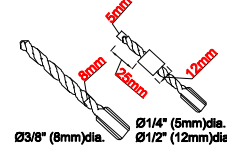


HSS


**Screw Driver**




**Drill**



**Level**



**Knife**

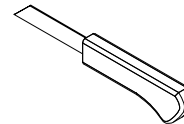

**Glove**




**MASONRY DRILL BIT FOR TILE** Ø3/8" (8mm)



**Safety Glasses**




**Silicone**




**Measuring Tape**



**Soft Head Hammer**



**Pencil**



# INSTALLATION INSTRUCTIONS


- STEP 1:**
- Use a wood stud finder to locate the wood studs behind the walls , and then mark by pencil.
  - Use a pencil to mark the installation location on the **Wood Cleat (B)** , according to the Wood stud's location.
  - Use a level to ensure the **Wood Cleat (B)** will be level before installing to the wall.

NOTE

Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because the dry wall cannot hold the cabinet.


| vanity | hole | a   | b   | c   |
|--------|------|-----|-----|-----|
| 24"    | 3    | 8"  | 8"  | -   |
| 30"    | 3    | 12" | 12" | -   |
| 36"    | 3    | 12" | 12" | -   |
| 48"    | 4    | 12" | 12" | 12" |
| 60"    | 4    | 12" | 24" | 12" |

NOTE: The a/b/c value is for reference only , please according to the Wood stud's location.

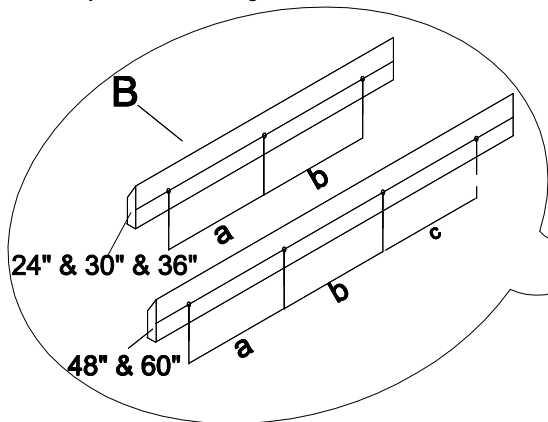


Horizontal line

Wood stud

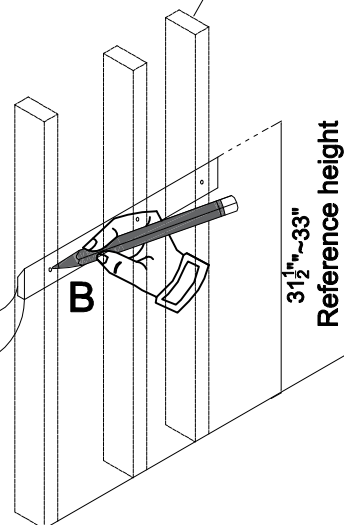


31 1/2"~33"  
Reference height

- STEP 2:** Drill the holes according to the marks using a drill.

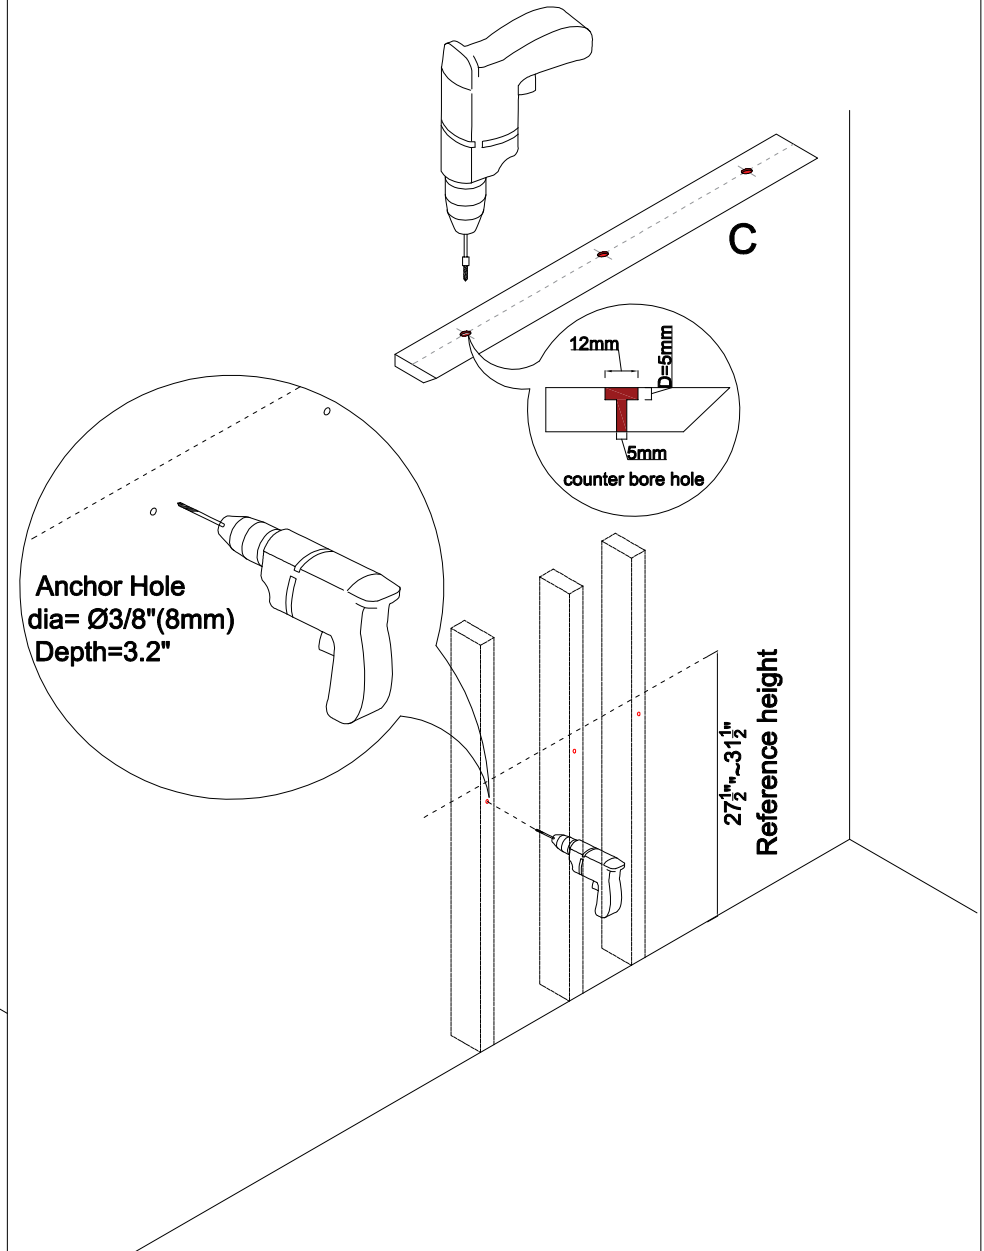


# INSTALLATION INSTRUCTIONS

**STEP 3:** Install the **Wall Anchors (E)** provided into the wall with hammer.

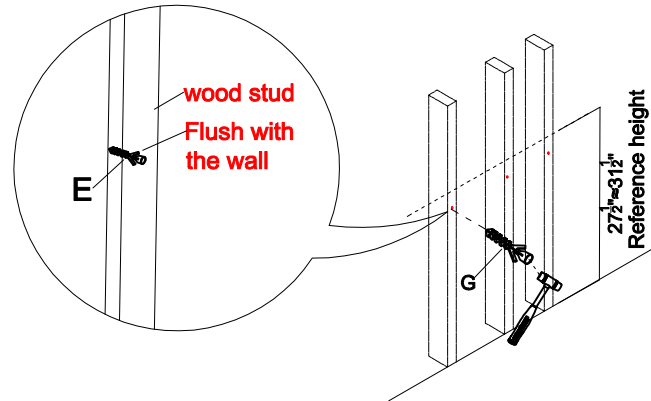


**STEP 4:** Install the **Wood cleat (B)** to the wood studs by screw driver.

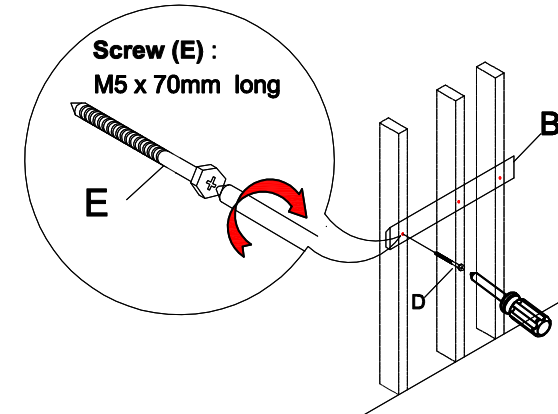


**STEP 5:** With help from another person, carefully hang the **Vanity (A)** onto the **Wood Cleat (C)**.

**NOTE** When installing the **Wood Cleat (B)** make sure the angle cut is facing the wall.

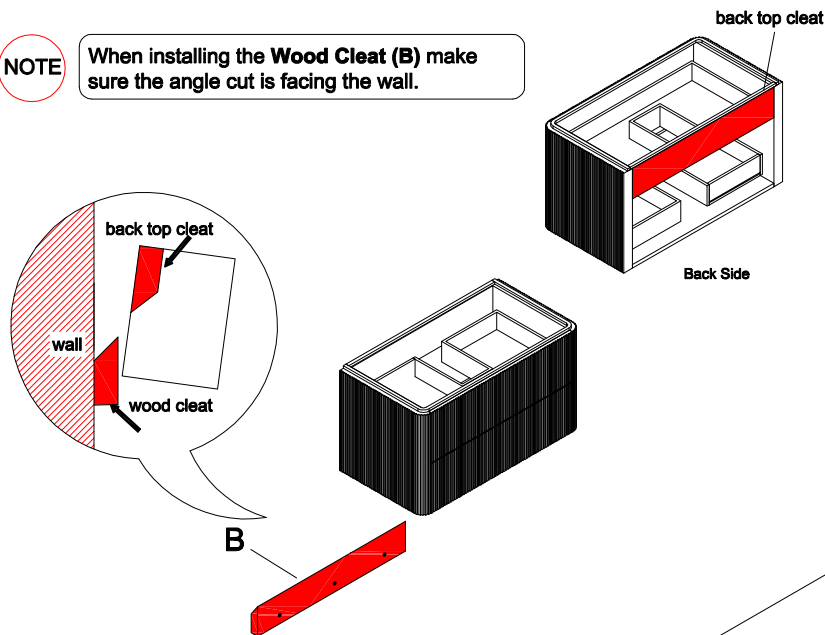


**STEP 6:** Using a pencil to mark the installation location for the **Metal Brackets (D)**.

**NOTE** Make sure the **Metal Brackets (D)** are installed on the wood studs.

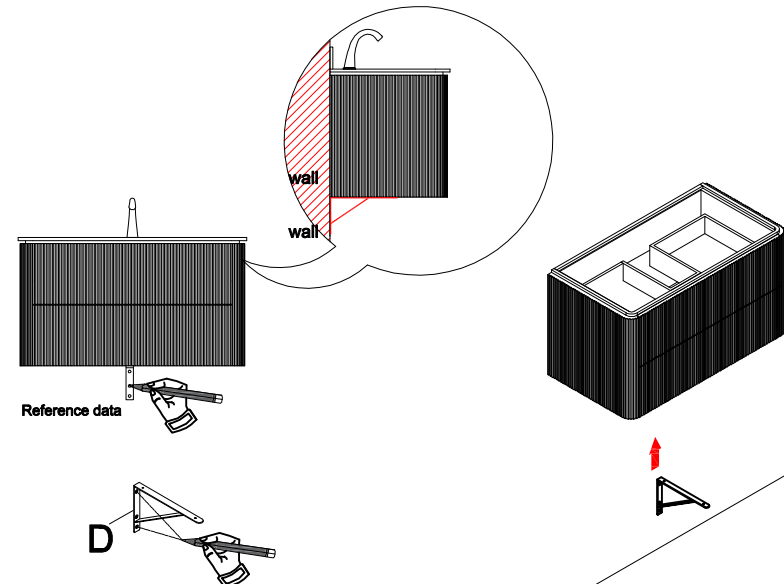


# INSTALLATION INSTRUCTIONS


**STEP 7:** Carefully remove the **Vanity (A)** with the help from another person, and then drill the anchor holes according to the marks using a drill.

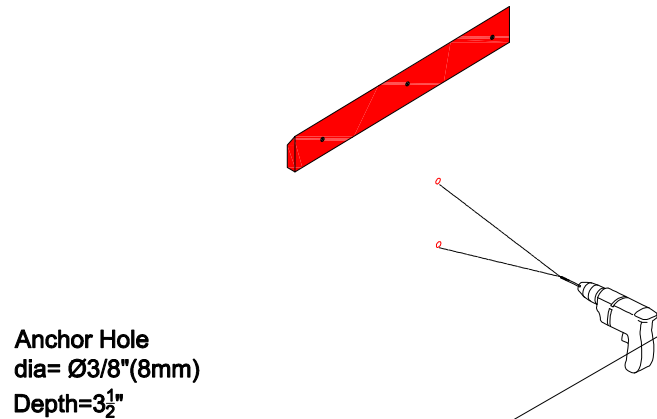


**STEP 8:** Install the **Wall Anchors (G)** provided into the wall with hammer.

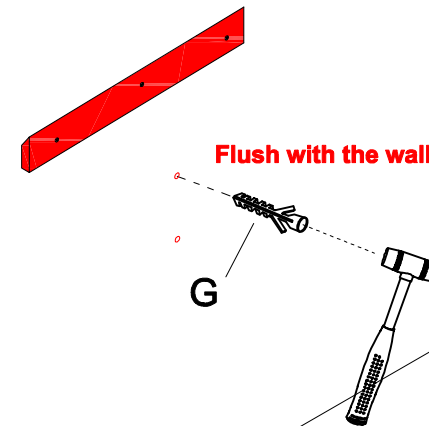

**STEP 9:** Install the **Metal Bracket (C)** to the wood studs by screw driver.

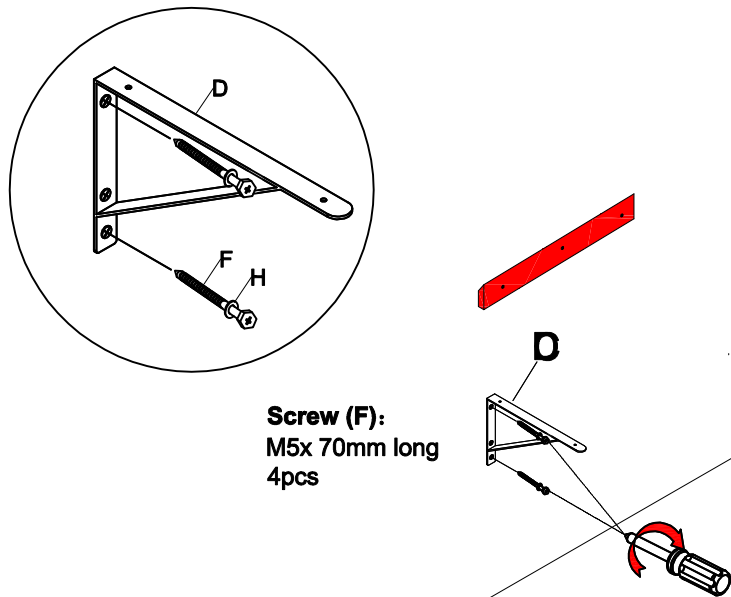


**STEP 10:** Hang the **Vanity (A)** to the wall and then connect the **Vanity (A)** to the **Wood Cleat (C)**.

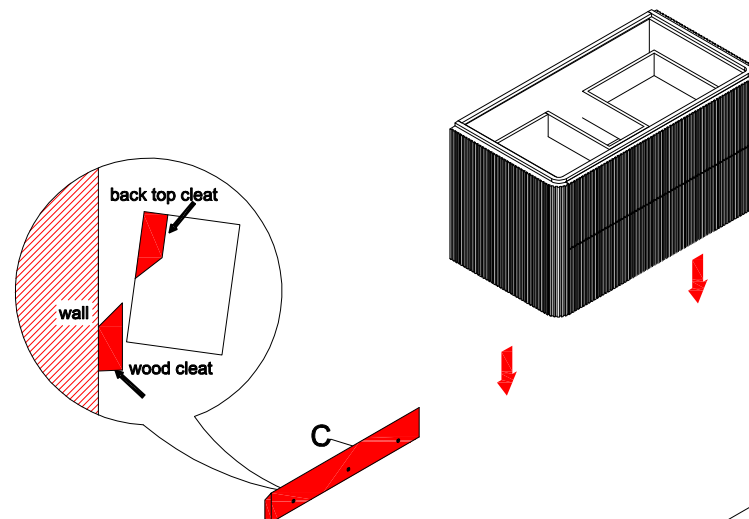


# INSTALLATION INSTRUCTIONS


STEP 11: Connect the **Metal Bracket (C)** to the **Vanity (A)** with **Screws (E)**.

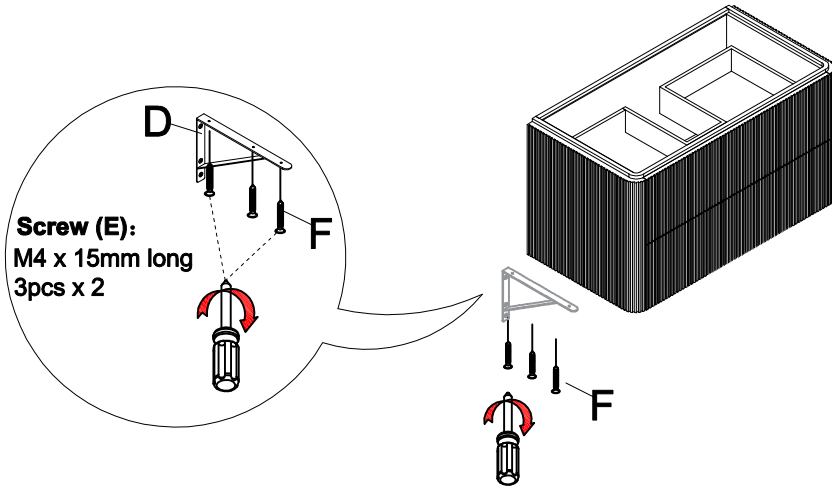


STEP 12: Using a Screw(F) to mark the installation location for the **Handle (I)** in the middle .

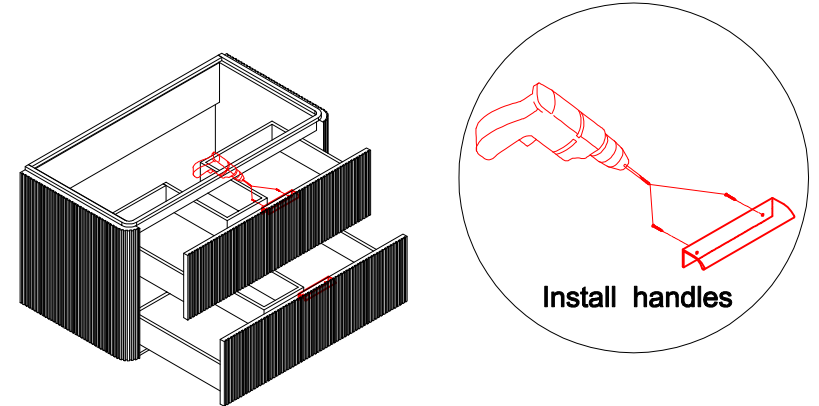

STEP 13:

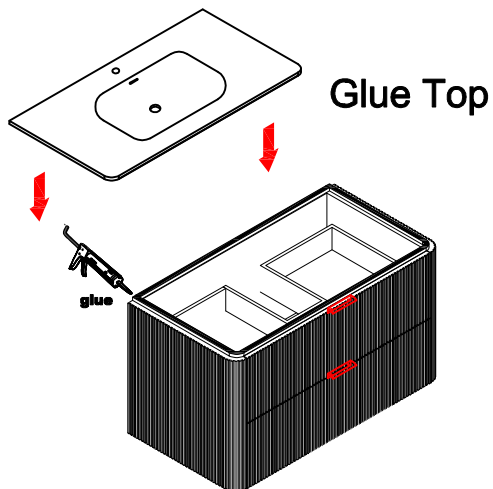

STEP 14:

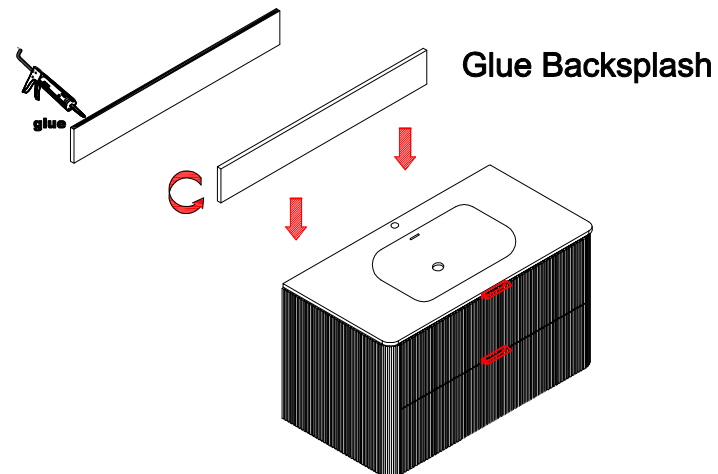

STEP 15:

