

WE APPRECIATE FEEDBACK!

Please allow our customer service team to help with any issues before you leave a review.



/atomismartino



/atomi_smart



@atomi.smart



Qi Wireless Charger

10W Fast Charge

User Manual

Need assistance?



DO NOT RETURN THIS
PRODUCT TO THE STORE

Call 1-800-757-1440

Mon-Fri 9:00 a.m. - 5:00 p.m. EST (U.S.)

or email us at info@atomiusa.com



Date Code: 06/19

Thank you for purchasing the atomi Qi Wireless Charger

The atomi Qi Wireless Charger features Qi technology that allows you to charge a compatible device quickly and wirelessly through electromagnetic induction.

All you have to do is place any compatible device on top of the Wireless Charger Pad to charge it.

NOTE: If a device is not Qi compatible, you will need a Qi receiver to charge the device.

Attention: You can use any compatible micro USB cable and 2 amp wall charger to power your Qi Wireless Charger. Maximum output for the pad is 2 amps, and using a 1 amp charger will result in a longer charging time.

What's Inside

1. Qi Wireless Charger
2. Micro-USB cable
3. User guide

Specifications

Input: 5V 2A, 9V 1.67A

Compatible with any Qi-enabled device


The Qi Wireless Charger can provide a charge to any device with integrated Qi functionality, including the iPhone® 11/11 Pro/11 Pro Max, iPhone® XS, iPhone® XS Max, iPhone® XR, iPhone® X, iPhone® 8, 8 Plus, Galaxy® S10e/S10/S10+, Galaxy® S9/S9+, Galaxy® S8/S8+, Galaxy® Note10/10+, Galaxy® Note9, Galaxy® Note8, LG® G8 ThinQ™, LG® G7 ThinQ, LG® V30 ThinQ.

Watches are not recommended to be charged on this item as the charger may get hot and damage the watch.

Charging Your Wireless Device


1

Plug your Qi Wireless Charger into a USB charger. (USB charger not included)

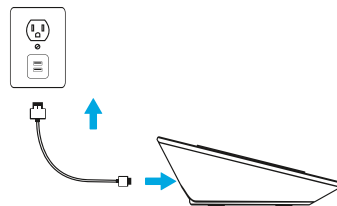


2

Place the devices on the center of your wireless charging pad. Make sure the device is aligned over the center of the charging base. Charging will begin on contact.

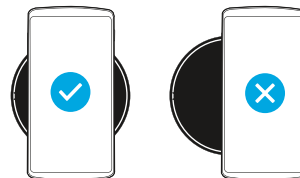

Indicator lights and what they mean

- Blue light:
Your device is charging.
- Green light:
Your device is fully charged
and is in standby mode.

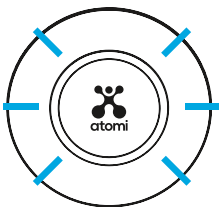

NOTE: For iOS devices, the green light indicating a full charge will not turn on.

Attention

Parts of the Qi Wireless Charger are magnetized. Do not put credit cards or other magnetic storage devices near the Qi Wireless Charger as information may be erased.

Caution: If you have an implanted medical device, including pacemaker, implanted cardioverter defibrillator, etc., you should:

- Keep the Qi Wireless Charger more than 6 inches away from the medical device.
- Unplug the Qi Wireless Charger if you think it is interfering with your medical device.
- Follow the directions that came with your medical device.

Safety Information

Taking care of your Qi Wireless Charger will protect your warranty coverage. Here is how to properly care for your atomi Qi Wireless Charger:

- Keep it dry—any moisture, including humidity, can corrode electronic circuits.
- Do not use your Qi Wireless Charger if it gets wet. Wait until it dries.
- If the Qi Wireless Charger is damaged in any way, do not use it.
- Keep it free from dust—dust can damage parts and electronic components.
- Do not store in cold temperatures as moisture can form inside the charger when it warms up to room temperature/charge.
- Do not modify the Qi Wireless Charger in any way.
- Never drop, knock or shake the Qi Wireless Charger. This could break internal circuit boards and mechanics.
- Always clean your Qi Wireless Charger with a soft, clean dry cloth.

For questions or concerns, email us at info@atomiusa.com
Manufactured and marketed by Atomi Inc.
10 West 33rd St., New York, NY 10001
atomi™ is a trademark of Atomi Inc.
Designed by atomi in New York. Made in China

One-year limited warranty from the date of purchase
against defects in material and workmanship.