

VEVOR

Affordable. Reliable. Home Improvement.

Tool Sanitizer

Technical Support and E-Warranty Certificate
www.vevor.com/support

VEVOR




Affordable. Reliable. Home Improvement.

Tool Sanitizer

Model: 208C



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol	Symbol Description
	<p>Warning: To reduce the risk of injury, the user must read the instructions manual carefully.</p>
	<p>This symbol, placed before a safety comment, indicates a kind of precaution, warning, or danger. Ignoring this warning may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendation shown below.</p>
	<p>CORRECT DISPOSAL:</p> <p>This product is subject to the provision of European Directive 2012/ 19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.</p>

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

SAFETY INSTRUCTIONS




WARNING: Do not expose eyes or skin to UV light.

1. When using the sterilizer for the first time, operate it in an empty load mode for working cycle, then open the door for 20 minutes. This operation can eliminate any odd smell inside the cabinet.
2. Make sure to drain all water the utensils before placing them in the sterilizer. The utensils should not be stacked but placed vertically one by one to achieve the best sterilization effect.
3. In case of any abnormal conditions (such as unusual noise, odd smell, or smoke), immediately unplug the power cord of the sterilizer and contact the repair center or the manufacturer for inspection and repair. Do not use it again until the cause of the fault is resolved.
4. When maintaining or cleaning the device, make sure to unplug the power cord to ensure complete disconnection from the power source.
5. Wait for 10 minutes after the sterilization cycle completed before opening the door. Use the utensils only after they have cooled down to avoid affecting the sterilization effect or causing burns.
6. Do not install sterilizer near flammable materials.
7. If the power cord is damaged, it must be replaced by a professional from the manufacturer, its repair department, or similar department to avoid danger.
8. Do not place the sterilizer in areas prone to moisture or water splashes, and do not use heating appliances near the sterilizer, as this may cause deformation or malfunction of the sterilizer.
9. Special user groups (such as children) are prohibited from using this device.
10. After use, if it will not be used for a long, please cut off the power and do not leave the power cord in a connected state to avoid danger.
11. It is strictly prohibited to directly rinse the with water or immerse the machine in water.
12. The smell produced during the ultraviolet disinfection process is the smell of active oxygen, which is normal phenomenon and harmless to the human body.

MODEL AND PARAMETERS



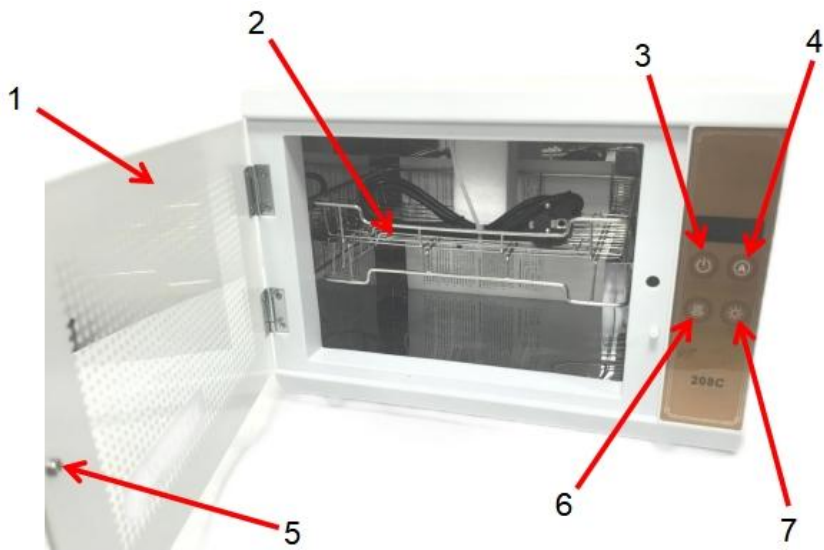

Model	208C
Input	AC 110V 60Hz(US), AC 220-240V 50Hz(EU&AU)
Max. Power	160W
Working Temperature	60°C
Temperature Error	±10°C
Size	368*230*260mm

STRUCTURE DIAGRAM



1.Tempered glass door	2.Steel basket
3.Power button	4.Automatic button
5.Handle	6.Drying button
7.Disinfection button	

PARTS LIST

	
Tool Sanitizer x1	Steel basket x2
	
Power Cord x1	User Manual x1

OPERATION METHOD

1. Power button: Connect the power, the power indicator light blinks, press the power key once, the buttons on the display light up and stay on, and the functions can be operated.

2. Automatic button: Press the automatic key once, the display shows 0 minutes and 15 minutes, three seconds later the machine automatically starts working, first drying with hot air for 60 minutes, then disinfecting ultraviolet light and ozone for 15 minutes. Press the automatic key twice, the display shows 90 minutes and 30 minutes, three seconds the machine automatically starts working, first drying with

hot air for 90 minutes, then disinfecting with ultraviolet light and ozone for 30 minutes. Press the automatic key three times, the display shows 30 minutes and 10 minutes, three seconds later the machine automatically starts working, first drying with air for 30 minutes, then disinfecting with ultraviolet light for 10 minutes. Once the machine starts working, the corresponding function key bl and the corresponding display time shows a countdown. Hold the automatic key for 3 seconds, the display shows 24:00 and enters the 24-hour sterile storage function. The first work is to dry for 45 minutes and disinfect for 15 minutes. After the first work mode is completed, works for 15 minutes every 3 hours (first drying for 10 minutes, then disinfecting for 5 minutes). After 24 of work is completed, it will automatically shut down.

3. Drying button: Press the drying key once, the display shows 45 minutes of drying. Press it twice in a row, the display shows 60 minutes of drying. Press it three times in a row, the display shows 90 minutes of drying. After selecting the time, the machine will automatically start working in three seconds. The drying key light will flash, and the display will show a countdown. Hold the drying key for 3 seconds, the display will show 12:00, which means entering the 12-hour heat preservation function. If no operation is performed, machine will automatically shut down after 12 hours.

4. Disinfection button: Press the disinfection key once, the display shows 10 of disinfection. Press it twice in a row, the display shows 20 minutes of disinfection. Press it three times in a row, the display shows 30 minutes of disinfection. After selecting the disinfection time, the machine will automatically start working in three seconds. The disinfection light will flash, and display will show a countdown.

Maintenance

1. Make sure to unplug the power cord before cleaning or maintaining the disinfection cabinet.
2. Wear gloves cleaning or maintenance to prevent cuts from sharp edges inside the cabinet.

3.Regularly wipe off stains from the surface to keep the cabinet clean and attractive.

4.Electrical components must not be immersed in water.Do not rinse the cabinet with water.

5.Regular maintenance is recommended.Unplug the power cord,use a cloth with a small amountof neutral detergent to gently remove stains inside and outside the cabinet,then use a cleandamp cloth to remove the detergent.

6.When disinfection cabinet is not in use,it should be unplugged.If it is to be unused for a longtime,moved,or serviced,make sure unplug the power cord first.

7.If any abnormality occurs during use,stop using it immediately and unplug the power cord.Toavoid danger,installation or repair must be done by a qualified electrical repair person.

Common Fault Guidelines

Fault Description	Cause Analysis	Solution
The device is not powered on	The power cord is not plugged in	Plug the matching power source we provide
The lamp does not light up	The lamp tube is loose	Reinstall the lamp tube

Manufacturer: Foshan Kangzhiqing Electrical Appliance Co.,Ltd

Address: No.23-2,Liuyi San Road,Nanhai District,Foshan City,Guangdong Province, China

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.



Technical Support and E-Warranty Certificate
www.vevor.com/support