

User Manual

for iPad 12.9-inch / 11-inch / 10.9-inch/
10.5-inch /10.2-inch and 8.3-inch

SWIVEL SERIES

CONTENTS

COMPATIBLE INFORMATION

..... 1

SPECIFICATION & ACCESSORY INCLUDED

..... 2

INSTALLATION

..... 3

POWER SOURCES

..... 4-5

BLUETOOTH CONNECTION

..... 6-7

KEYBOARD FUNCTION (for iPad 12.9")

..... 8

KEYBOARD FUNCTION (for iPad 10.2"/10.5"/10.9"/11")

..... 9

KEYBOARD FUNCTION (for iPad 8.3")

..... 10

TRACKPAD & GESTURE DESCRIPTION

..... 11-12

TROUBLE SHOOTING

..... 13-16

WARRANTY & TECHNICAL SUPPORT

..... 17

COMPATIBLE INFORMATION

VERIFY YOUR IPAD IS FULLY MATCHED BEFORE INSTALLATION

Compatible for iPad Mini 8.3-inch

iPad Mini 8.3 inch 6th Generation 2021 (A2567、 A2568、 A2569)

Compatible for iPad 10.2-inch/10.5-inch:

iPad 9th Generation 10.2 inch 2021 (A2602、 A2604、 A2603、 A2605)

iPad 8th Generation 10.2 inch 2020 (A2428、 A2429、 A2430、 A2270)

iPad 7th Generation 10.2 inch 2019 (A2197、 A2198、 A2200)

iPad Air 3rd Generation 10.5-inch 2019 (A2154、 A2123、 A2153、 A2152)

iPad Pro 2nd Generation 10.5 inch 2017 (A1709、 A1852、 A1701)

Compatible for iPad 10.9-inch

iPad 10th generation 2022 10.9-inch (A2696、 A2777、 A2757)

Compatible for iPad Air 10.9-inch

iPad Air 10.9 inch 5th Generation 2022 (A2588、 A2589、 A2591)

iPad Air 10.9 inch 4th Generation 2020 (A2324、 A2325、 A2072、 A2316)

Compatible for iPad Pro 11-inch

iPad Pro 11 inch 4th Generation 2022 (A2759、 A2435、 A2761、 A2762)

iPad Pro 11 inch 3rd Generation 2021 (A2377、 A2459、 A2301、 A2460)

iPad Pro 11 inch 2nd Generation 2020 (A2228、 A2068、 A2230、 A2231)

iPad Pro 11 inch 1st Generation 2018 (A1980、 A2013、 A1934、 A1979)

Only Compatible with below iPad Pro 12.9-inch models:

iPad Pro 12.9 inch 6th Generation 2022 (A2436、 A2764、 A2437、 A2766)

iPad Pro 12.9 inch 5th Generation 2021 (A2378、 A2461、 A2379、 A2462)

iPad Pro 12.9 inch 4th Generation 2020 (A2233、 A2229、 A2069、 A2232)

iPad Pro 12.9 inch 3rd Generation 2018 (A1876、 A2014、 A1895、 A1983)

Note: If compatibility information is updated without prior notice, You may refer to [selling link](#) or contact our [seller on Amazon](#) to confirm the latest compatible information.

SPECIFICATION & ACCESSORY



1.Find your iPad model number in settings
a, Go to iPad>>Settings>General>About
b, >>Tap on the model number and the
model of AXXXX will be appeared

2.Find your iPad model number on the back
of your iPad.

- Bluetooth operating distance: 10 meters
- Modulation system:GFSK
- Power supply: DC 5V/9V Type-C Charging Port
- Rechargeable battery:500mAh
- Standby time:90 days
- Charging time:<3hours
- Working time: <5 hours(with backlight)<180hours (with backlight off)
- Works system:iPadOS (above14.6 above)

ACCESSORY INCLUDE

 Keyboard Case

 Type-C Charging Cable

* Power code is not included the package

 User Manual



INSTALLATION



PUT IPAD INTO THE CASE

To install your iPad from the bottom to the top of the case and fasten it.



LOCK THE SECURE BUCKLES

The left and right locks are designed to double protect your iPad, in case your iPad accidentally falls.

- * The buckle is made of plastic, please turn it gently.
- * If there is no buckles design on the side of keyboard case, please kindly refer to the final version on your hands.



for iPad 10.2"/10.5"/10.9"/11"

PENCIL HOLDER

Available for Apple Pen 2nd Gen charging when the pencil is ONLY attached to your iPad.

NOTE:

1. If there is no pencil holder design on the left side of keyboard case, please kindly refer to the final version on your hands.




for iPad 12.9"

PENCIL HOLDER

Available for Apple Pen 2nd Gen charging when the pencil is ONLY attached to your iPad.

2. iPad 8.3-inch not compatible with pencil holder design.

POWER SOURCES

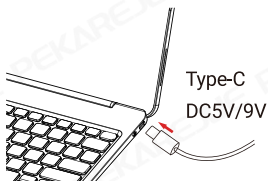

POWER SUPPLY


The keyboard case is charged by TYPE-C



POWER SWITCH

for iPad 12.9"

Push the power button to turn On/Off your device. The LED will be flashed by 3 times once turn it on or off.

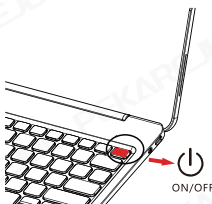

POWER SWITCH


for iPad 8.3"/10.2"/10.5"/10.9"/11"

Holding the POWER button on keyboard to turn On / Off your device . the LED will be flashed by 3 times once turn it on or off. (to press any keys to wake it up during standby mode)

NOTE :

Keep at normal temperature and charge at normal voltage. If you don't use it for long time, you need to charge your keyboard in time (once of two months).

POWER SOURCES (LED INDICATOR)

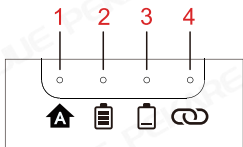


Indicator for iPad 12.9"

LED INDICATOR

- LED1
White: Caps mode is On/Off :Caps Mode is Off
- LED2
Green: Battery is Full Charged
- LED3
Red Flashing: Low-battery Warning
Red Keep Lighting: Undering Charging mode
- LED4
Blue Flashing: Bluetooth is Waiting for Pairing
Blue Keep Lighting: Bluetooth is Paired


LED INDICATOR

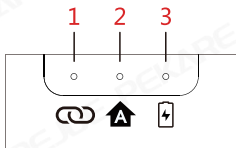

Indicator for iPad 10.2"/10.5"/10.9"/11"

- LED1
Blue Flashing: Bluetooth is Waiting for Pairing
Blue Keep Lighting: Bluetooth is Paired
- LED2
White: Caps mode is On/Off :Caps Mode is Off
- LED3
Red Flashing: Low-Battery Warning
Red Keep Lighting: Undering Charging Mode
Green: Battery is full Charged

LED INDICATOR

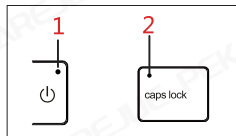

Indicator for iPad 8.3"

- LED1
Blue Flashing: Bluetooth is waiting for pairing
Blue Keep Lighting: Bluetooth is paired
Red Flashing: Low-battery warning
Red Keep Lighting: Undering charging mode
Green: Battery is full charged
- LED2
White: Caps mode is On/Off : Caps mode is Off

BLUETOOTH CONNECTION

NOTICE BEFORE CONNECTING :

1. Make sure your iPad ios system up to 14.6 or above
2. iPad assistive touch toggle function on. (Setting/Accessibility/Touch/AssistiveTouch)



STEPS FOR CONNECTION (for iPad 10.2"/10.5"/10.9"/11"):

1. Holding press the power button (⏻) to turn on the iPad keyboard. (The RGB backlight will turn on and then turn off automatically a second.)
2. Then holding press connection button (🔗) blue wireless indicator will flash which shows the keyboard is waiting for pairing mode
3. Turn on your iPad >>>Setting >>>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection.

STEPS FOR CONNECTION (for iPad 8.3"/12.9"):

1. For iPad 12.9" : Push the power button to turn on the iPad keyboard.
For iPad 8.3" : Holding press the power button (⏻) to turn on the iPad keyboard. (The RGB backlight will turn on and then turn off automatically a second.)
2. Then to press combination keys "Fn" and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
3. Turn on your iPad >>>Setting >>>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection.

NOTE:

1. Device is connected when Bluetooth indicator stops flashing.
2. When the keyboard is turned on, if there is no signal input for more than 10 minutes, it will automatically enter sleep mode. At this time, you only need to double-click any button to re-activate the keyboard again.
(do not need to turn on/off the power and reconnected again)
3. When reconnecting Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

BLUETOOTH CONNECTION




STEP 1:

for iPad 8.3"/10.2"/10.5"/10.9" and 11"
Holding press power button
for more than 3 seconds to
turn on the keyboard case.



STEP 1:

for iPad 12.9"
Push the power button
to turn On/Off your device.

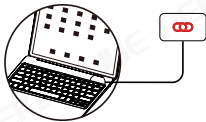

STEP 2:

for iPad 10.2"/10.5"/10.9"/ 11"
Holding press connection
button for more than 3
seconds to turn on the
Bluetooth connection.



STEP 2:

for iPad 8.3"/12.9"
Press combination keys for
Bluetooth connection "Fn" and "C"



STEP 3:

Find the Pair name on your iPad Setting - Bluetooth list: "iPad Keyboard"



STEP 4:


Confirm the pairing request on your iPad.

KEYBOARD FUNCTION (for iPad 12.9")

for iPad 12.9-inch Keyboard Layout

A FULL ROW OF HOTKEYS AND MEDIA KEYS

Function key: Press the FN + function key

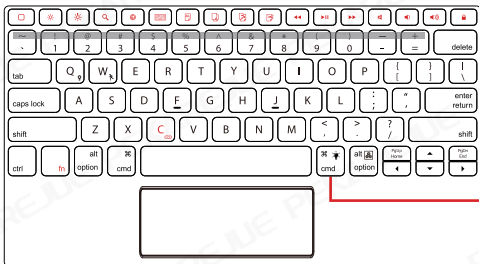

* To type the character in below grey area, hold shift and press the desired character

* Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

- Home
- ⊛ Darker
- ⊛ Brighter
- 🔍 Enable iPad search
- 🌐 Switch the language
- 🖱️ Virtual keyboard
- 📄 Select all
- 📄 Copy
- 📄 Paste
- ✂️ Cut
- ⬅️ Back
- ⏮️ + [] Switch language input method (Note: Wubi input method is not supported)
- ▶️ Play/pause (Note: third party player video is not supported)
- ▶️ Forward
- 🔇 Mute
- 🔊 Volume down
- 🔊 Volume up
- 🔒 Fn + Lock screen
- Delete
- Tab/Caps lock
- Trackpad
- fn + cmd ⬇️ Brightness for backlight
- fn + Q Turn On/Off breathing backlight
- cmd + V Paste
- cmd + C Copy
- fn + alt option Colorful backlight adjustable
- fn + W Speed control for backlight
- cmd + A Select all
- cmd + X Cut

RGB BACKLIGHT KEYS

- Seven modes backlight: Press **Fn** + **alt option** to switch 7 different backlight modes or turn off the RGB backlight.
- Three modes breathing backlight: Press **Fn** + **Q** to turn off/on the breathing backlight. Press **Fn** + **w** to control the speed of the breathing light fast or slow.
- Three modes brightness backlight: press + **Fn** + **cmd** ⬇️ to adjust the brightness of the backlight.

NOTE:


For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

KEYBOARD FUNCTION (for iPad 10.2"/10.5"/10.9"/11")

for iPad 10.2-inch/10.5-inch/10.9-inch/11-inch Keyboard Layout

A FULL ROW OF HOTKEYS AND MEDIA KEYS

Function key: Press the FN + function key

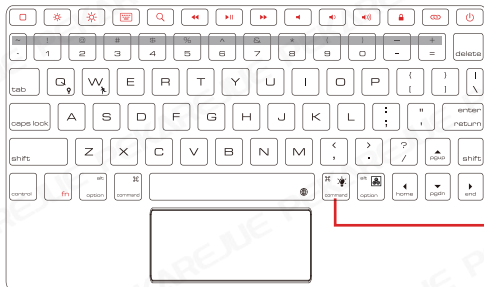

* To type the character in below grey area, hold shift and press the desired character

* Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

- Home
 - ☼ Darker
 - ☀ Brighter
 - 🔍 Enable iPad search
 - 🌐 Switch the language
 - 🖱 Virtual keyboard
 - 📄 Select all
 - 📄 Copy
 - 📄 Paste
 - ✂ Cut
 - ⬅ Back
 - ▶▶ Play/pause (Note: third party player video is not supported)
 - ▶▶ Forward
 - 🔇 Mute
 - 🔊 Volume down
 - 🔊 Volume up
 - 🔒 Fn + Lock screen
 - Delete
 - TabCaps lock
 - Trackpad
 - fn + cmd + ☼ Brightness for backlight
 - fn + option + ☼ Colorful backlight adjustable
 - fn + Q Turn On/Off breathing backlight
 - fn + W Speed control for backlight
 - cmd + V Paste
 - cmd + A Select all
 - cmd + C Copy
 - cmd + X Cut
- control + [greyed out] Switch language input method (Note: Wubi input method is not supported)

RGB BACKLIGHT KEYS

- Seven modes backlight: Press **Fn** + **option** to switch 7 different backlight modes or turn off the RGB backlight.
- Three modes breathing backlight: Press **Fn** + **Q** to turn off/on the breathing backlight. Press **Fn** + **W** to control the speed of the breathing light fast or slow.
- Three modes brightness backlight: press + **Fn** + **cmd** + **☼** to adjust the brightness of the backlight.

NOTE:


For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

KEYBOARD FUNCTION(for iPad 8.3")

for iPad 8.3-inch Keyboard Layout

A FULL ROW OF HOTKEYS AND MEDIA KEYS

Function key: Press the FN + function key

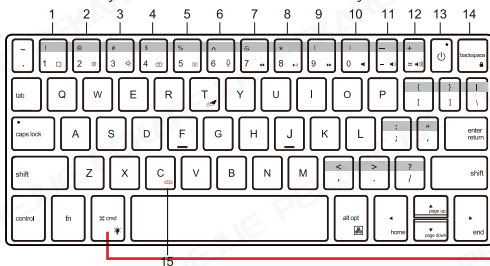

* To type the character in below grey area, hold shift and press the desired character

* Long Hold-app specific shortcut shows up(e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

1. Home
2. Brightness decrease
3. Brightness increase
4. Screenshot
5. Virtual keyboard
6. Intelligent voice
7. Back
8. Play / Pause
9. Forward
10. Mute
11. Volume down
12. Volume up
13. Power switch
14. Power switch
15. Bluetooth

+ Select all

+ Cut

+ Paste

+ Copy

+ Switch language input method(Note: Wubi input method is not supported)

+ Any letter can be typed with some special characters

RGB BACKLIGHT KEYS

+ Turn the backlight on or off,or adjust the brightness of the backlight

+ Backlight color switching

NOTE:

For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

TRACKPAD GESTURE DESCRIPTION


One Finger




Tap: Press with one finger until it feels a little bit. Tap and hold: Press and hold with one finger.



Open the Dock: Swipe the pointer across the bottom of the screen with one finger.
Go to the home screen: When the dock appears, swipe the pointer across the bottom of the screen again.



Open "Notification Center": Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.
Open "Control Center": Move the pointer to the status icon in the upper right corner of the screen with one finger, then tap or swipe up again with one finger.




Drag: Tap and hold the item, then slide your finger on the touch pad to move it.

Double Fingers



Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.



Scroll up or down: Swipe up or down with two fingers.
Scroll left or right: Swipe left or right with two fingers.




Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.
Open search from the home screen: Swipe down with two fingers.



Zoom: Place two fingers close together, spread to zoom in, or pinch to zoom out.

Three Fingers



Go to the home screen: Swipe up with three fingers



Open the APP switcher: Swipe up with three fingers, pause and then lift your finger



Switch between open apps: Swipe right with three fingers, then swipe left or right to switch.

BE SURE THAT TOUCHPAD CAN BE USED ON YOUR IPAD AS BELOW STEPS:

- 1.You need to complete below settings:Settings/Accessibility/Touch/AssistiveTouch/AssistiveTouch On
- 2.Make sure your iPad Software Version is up to 14.6 or above version.
- 3.Choose right "Keyboard" on your iPad
General/Keyboard/Keyboards/English(US)/QWERTY

KEYBOARD FUNCTION

Touchpad /Guesture

1. Make sure the iPadOS operation system up to 14.6 and above.
2. Press **Fn**+**T** to turn on/off the touch function.
3. After successfully turn on the touchpad, when moving the touchpad with your hand, you will see a cursor appear on the iPad screen.
4. The shortcut gestures are based on default setting. Kindly refer to our gesture instructions manual.
5. Kindly mind your hands on touchpad when typing, otherwise your cursor may move randomly. You can simply to turn it on or off.
6. When every time to connect the Bluetooth, the touchpad will a slight delay of about 3 seconds,which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

***You can adjust the cursor tracking speed as one of below settings:**

1.Settings/Accessibility/Touch/AssistiveTouch

On the bottom of this page, you can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise, and be more sensitive when it's close to the rabbit.

2.Settings/General/Trackpad&Mouse

You can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise and be more sensitive when it's close to the rabbit.

Note:

1. The second settings only can be set after keyboard connects to you iPad successfully.

TROUBLE SHOOTING

***How to confirm the keyboard need to be charged?**

1. When the low battery indicator (red sign) blinks, please use the included TYPE-C cable with your iPad charger to recharge it. The red indicator stays on during recharging. After the charging completed, the green indicator would light up.
2. If you do not use the keyboard for a long time. Please recharge your keyboard in time (once of two months).

***How to detect the battery level of the keyboard or ensure that the battery level has been successfully charged?**

1. If the LED charging indicator lights up in red for a long time, it means that is charging.
2. After the keyboard is successfully connected to the iPad. Swipe right on the iPad home screen. The keyboard battery life is subjected to the Bluetooth icon, see jpg 1.



jpg 1

***How to do if the keyboard can't connect to your iPad?**

1. Make sure a keyboard has already paired via Bluetooth.
2. The Bluetooth keyboard is charged.
3. The Bluetooth keyboard is within 33 feet.
4. Please delete all devices on your iPad Bluetooth list, then restart your iPad Bluetooth and restart the keyboard.
5. Not compatible with multiple device connections, only supports one by one connection.
6. When the battery is low, the Bluetooth connection may be interrupted.

***How to press symbol buttons ?**

After bluetooth connected well , just press combination Keys : "Shift" and " any symbol ". For example, "Shift" and " @ " then you will get "@ " on your iPad.

TROUBLE SHOOTING

***How to change between lowercase and uppercase on the keyboard?**

- 1.The caps lock default function is switch languages. So to type capital letters on the keyboard, please turn off the cap lock default function first.
- 2.Go to your iPad settings—Keyboards setting— hardware keyboard—turn off the toggle of switch languages using caps lock", then you can change between lowercase and uppercase by press the caps lock key.

***How to do if the space bar doesn't work?**

- 1.You can try below settings firstly:
Settings/Accessibility/Keyboards/Full Keyboard Access/Commands/
- 2.Then change settings for "Space" from "activate" to "Clear". If it comes back, then you can also turn off full keyboard access.
- 3.Once it is cleared, the space bar would work fine.

***How to do if some keys don't work?**

Some of the keys do not work,please try to reset the keyboard by pressing and hold the combination key"L+S+Z" for 3s, you'll see the indicator flash once. It shows the keyboard has been reset. After resetting the keyboard, please pair the keyboard with your iPad again.

***If there is delay after you press keys, please kindly check one of iPad Settings as below:**

Settings/Accessibility/Keyboards/Slow Keys Off
Settings/Accessibility/Keyboards/Slow Keys On 0.1 Seconds

***If there is repeated characters after you press certain key, please kindly check one of ipad Settings as below:**

Settings/Accessibility/Keyboards/Key Repeat On 0.1
SecondsSettings/Accessibility/Keyboards/Key Repeat Off

TROUBLE SHOOTING

***Be sure that touchpad can be used on your iPad as below steps:**

1.You need to complete below settings:

Settings/Accessibility/Touch/AssistiveTouch/AssistiveTouch On

2.Make sure your iPad Software Version is up to 14.6 or above version.

3.Choose right "Keyboard" on your iPad

General/Keyboard/Keyboards/English(US)/QWERTY

Note:

The second settings only can be set after keyboard connects to you iPad successfully.

***How to updating your iPadOS to 14.6 ?**

To upgrade your iPadOS to the latest version:

1. Open your device's Settings > General > Software Update.

2.Tap Download and Install.

*If you see Resume Download, tap that instead



TROUBLE SHOOTING

***If you have unwanted auto-correction or punctuation, please follow these steps:**


1. Open Settings app > General > Keyboard > Hardware Keyboard;
2. Toggle OFF Auto-Capitalization, Auto-Correction, and "." shortcut (please refer to the picture below).



360-Degree Rotating



360° Rotatable

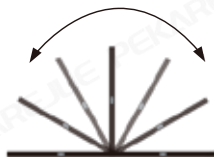

180° Flip

WARRANTY & TECHNICAL SUPPORT

Thanks for purchasing 360-degree swivel keyboard case with trackpad series, each unit was manufactured and under strict quality control. Each products is covered by a one year warranty,If you have any questions about the product, please contact our brandsupport at info@pekarejue.com And you are most welcom to contact us for latest user manual.

Thanks for your support always!

Please contact our brandsupport at info@pekarejue.com

