

WiFiLink 2


Installation and User Guide



Web Reference Link

<https://flowus.cn/share/c178693d-9f6f-4717-a090-f8a010f4bf11>

Product Features

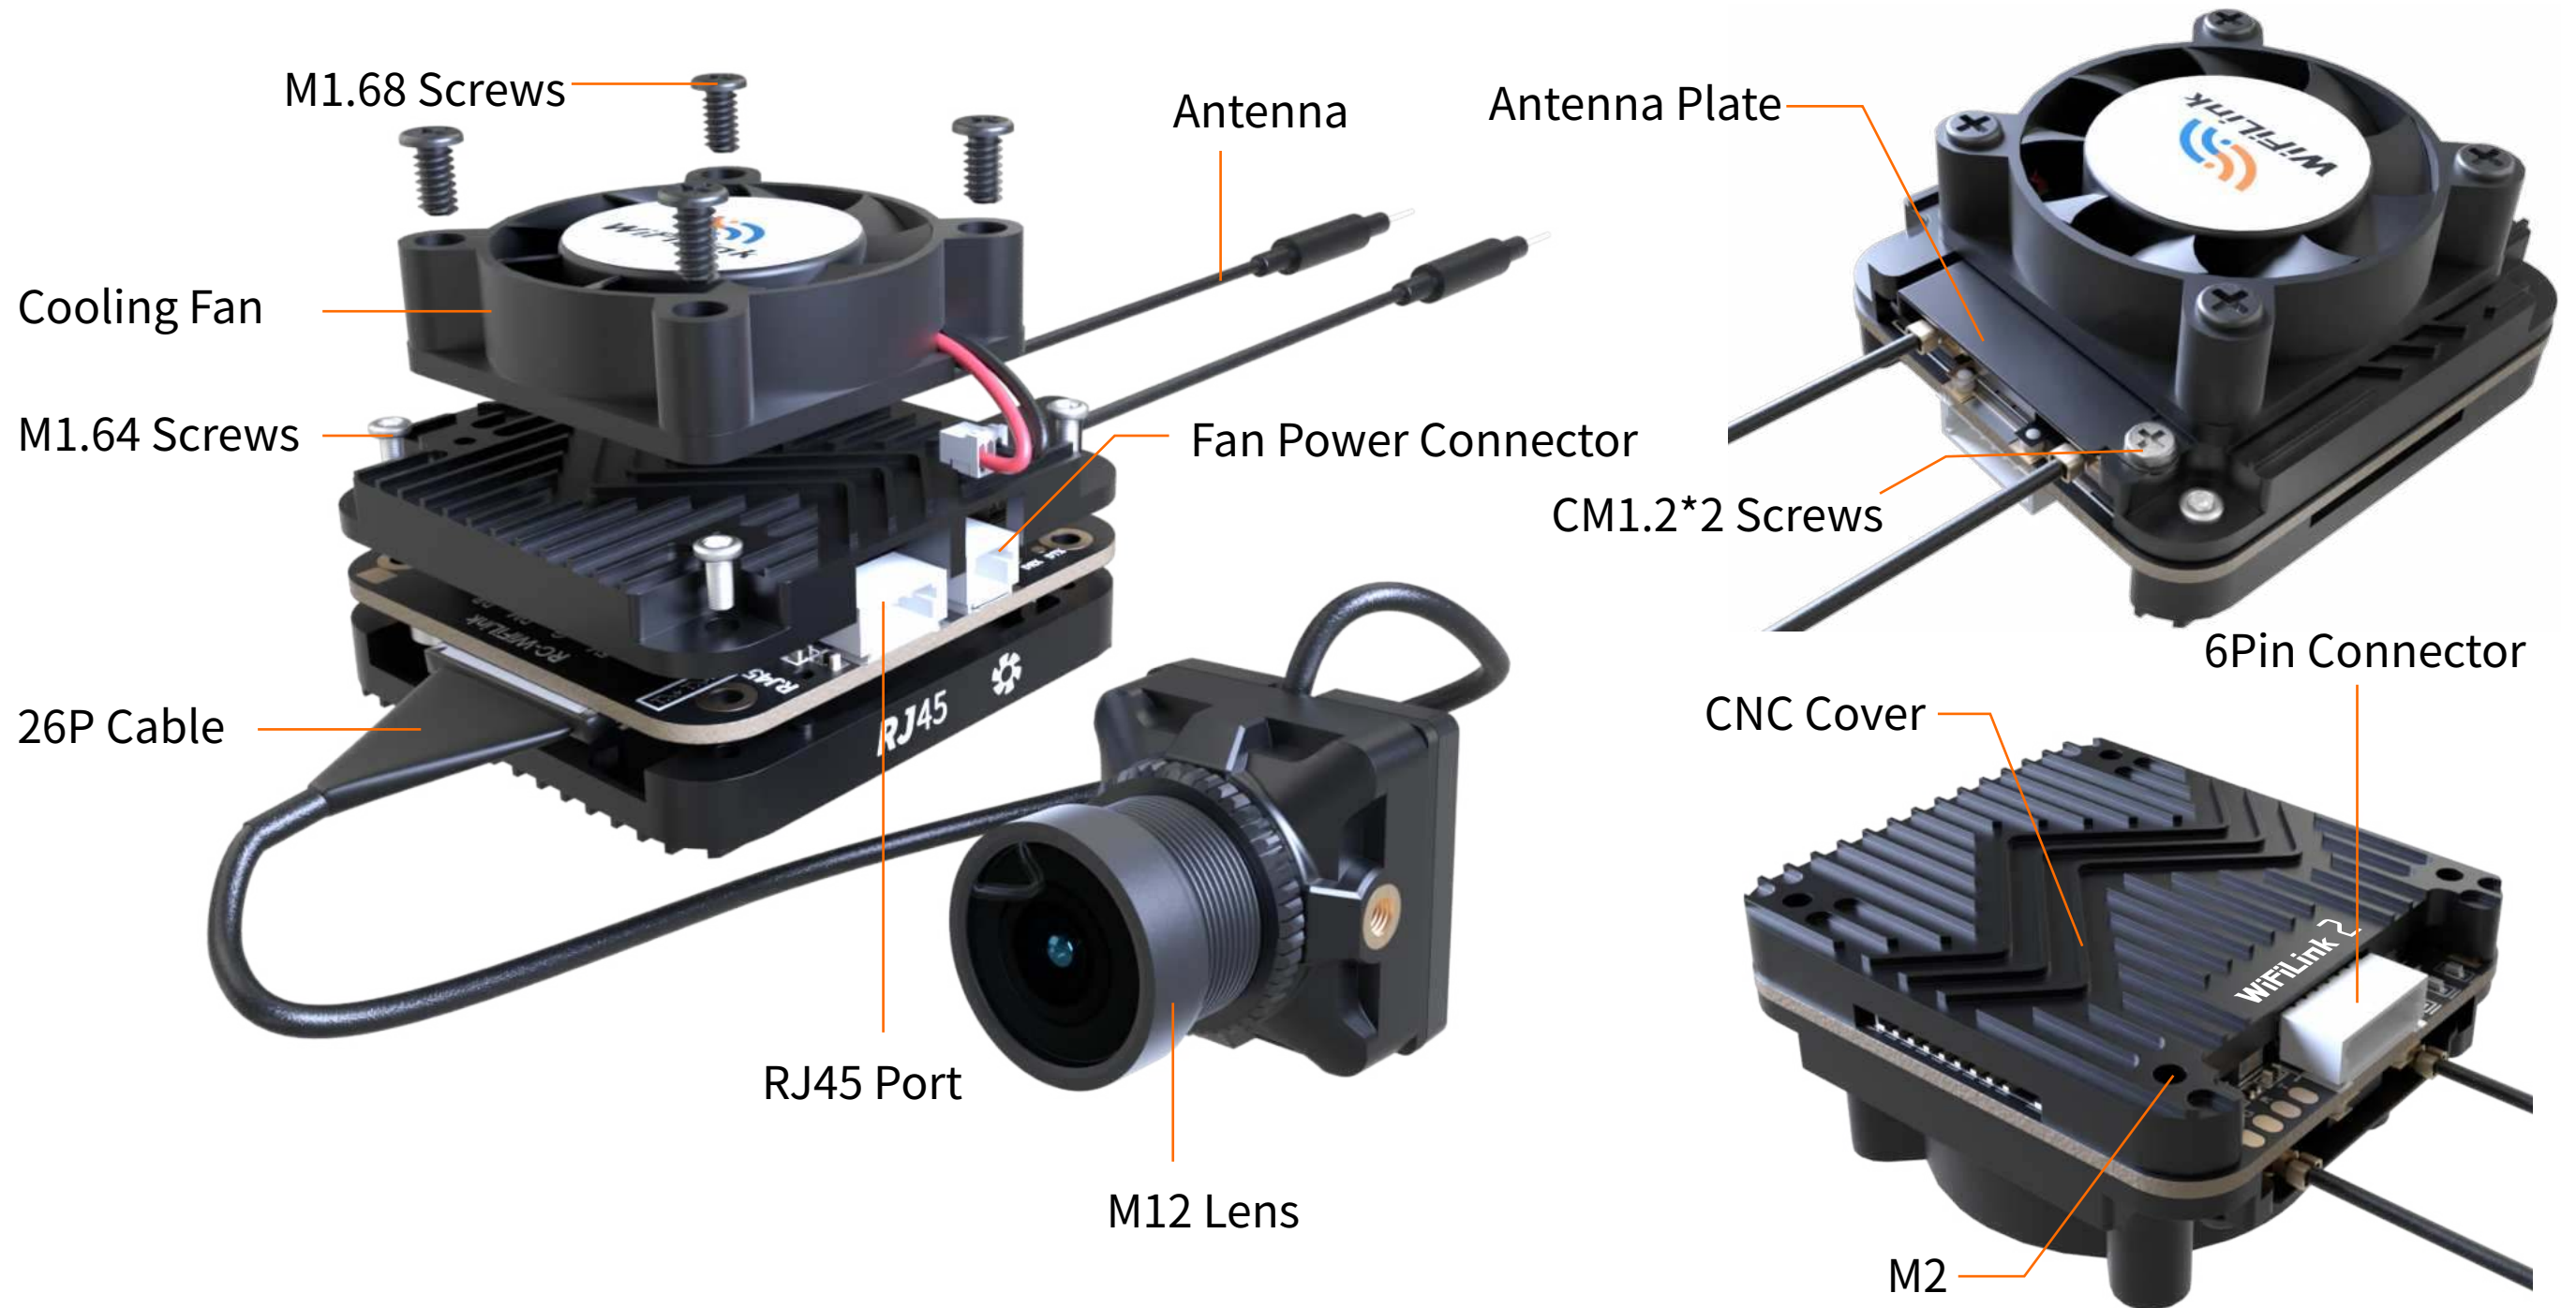

• Antenna Installation

When installing the WiFiLink 2 on the aircraft, pay attention to the following two points:

Antenna Layout:

Ensure that the two tail antennas are fully spread apart to avoid entanglement and reduce signal interference.


Antenna Orientation:

Point the antennas upward to avoid obstructions from the fuselage or battery, ensuring optimal signal performance.



▲ Refer to the diagram for the optimal antenna layout.

Light Status	Indication
● Green Off	Audio off
● Green Solid	Audio on
● Green Fast Flash	Firmware upgrade
● Green Slow Flash	Recording on
● Blue Solid	WiFiLink Startup
● Blue Fast Flash	WiFi Error
● Blue & Green Alternating Flash	High Temp Warning (>90°C)

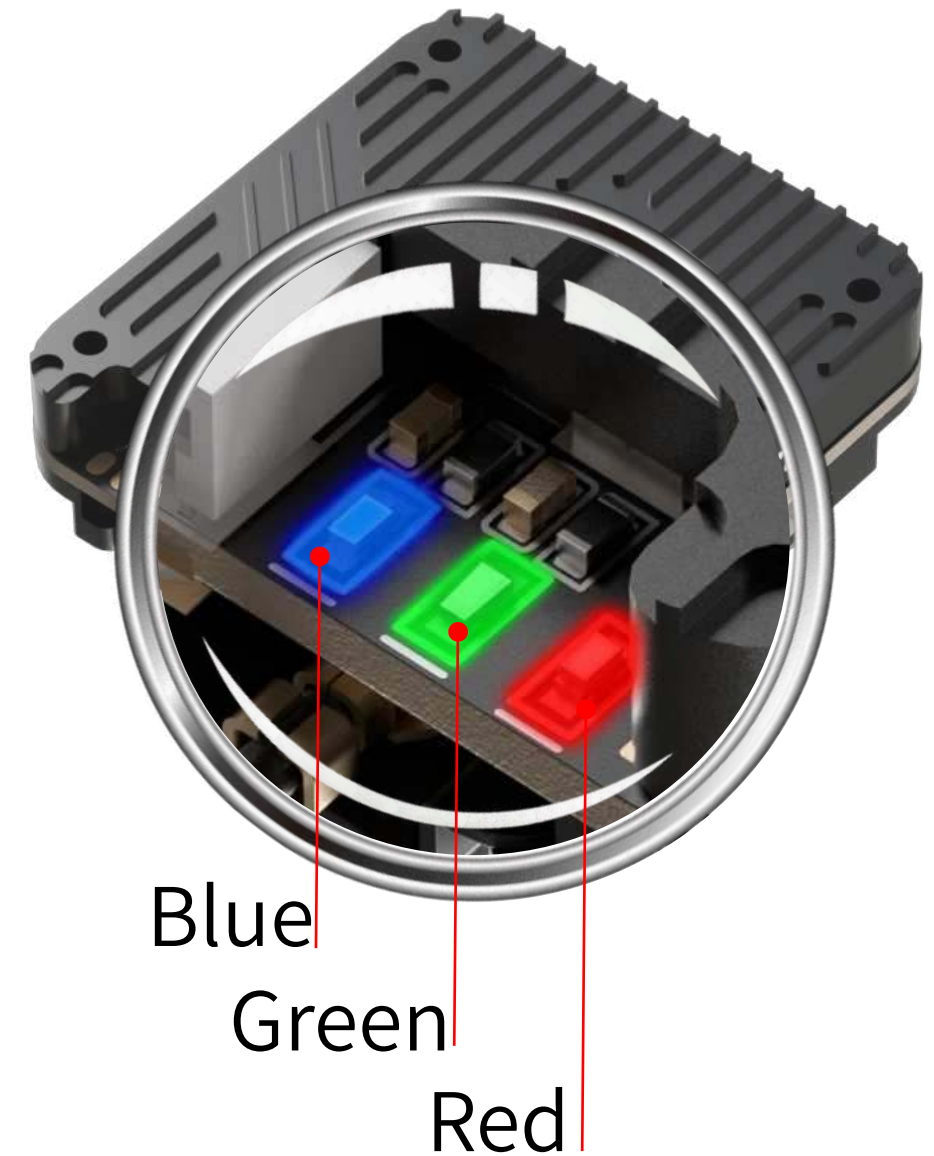

- **Install the APP**

PixelPilot Download Link:

<https://github.com/OpenIPC/PixelPilot/releases>

- **Set Parameters**

Set the Channel to 161 and the Video Codec to h265.



•Auxiliary Tools Links

OTG Cable Reference Link:

<https://item.jd.com/10087520840342.html#crumb-wrap>

8812AU Wireless Adapter Reference Link:

<https://item.taobao.com/item.htm?id=597898122636>

•How to Flash WiFiLink 2

Card Flashing Steps:

①Prepare Files

Copy WiFiLink-part0.bin and WiFiLink-part1.bin to the root directory of an empty SD card.

②Upgrade Steps

Insert the SD card into the camera mainboard and power it on. The camera will enter upgrade mode (about 15 seconds), with the green light flashing. After the upgrade (about 1 minute), the green light will turn off, and the SD card will be cleared. Upon re-powering, new configuration files (gs.key and user) will be generated.

Card Flashing File Address:

<https://www.runcam.com/download/runcamwifilink2>

•How to Obtain Configuration Files

Insert an empty SD card into the camera and power it on. It will generate the configuration files automatically.

•How to Set Parameters

It is recommended to use Notepad++ to edit the user file. Only the parameters listed under "Available values" can be modified, including:

Channel	Codec
ResolutionRatio	Bitrate
Mirror	Flip
Rotate	Contrast
Hue	Saturation
Luminance

•How to Use the Ethernet Port

Default Settings:

```
IP Address    192.168.1.10
Username     root
Password     12345
```


•How to Use with a PC Ground Station

Program Download:<https://github.com/OpenIPC/fpv4win/releases>

Follow these steps:



① Step One

Insert the 8812AU wireless adapter into the computer and reconfigure the driver using the Zadig program.

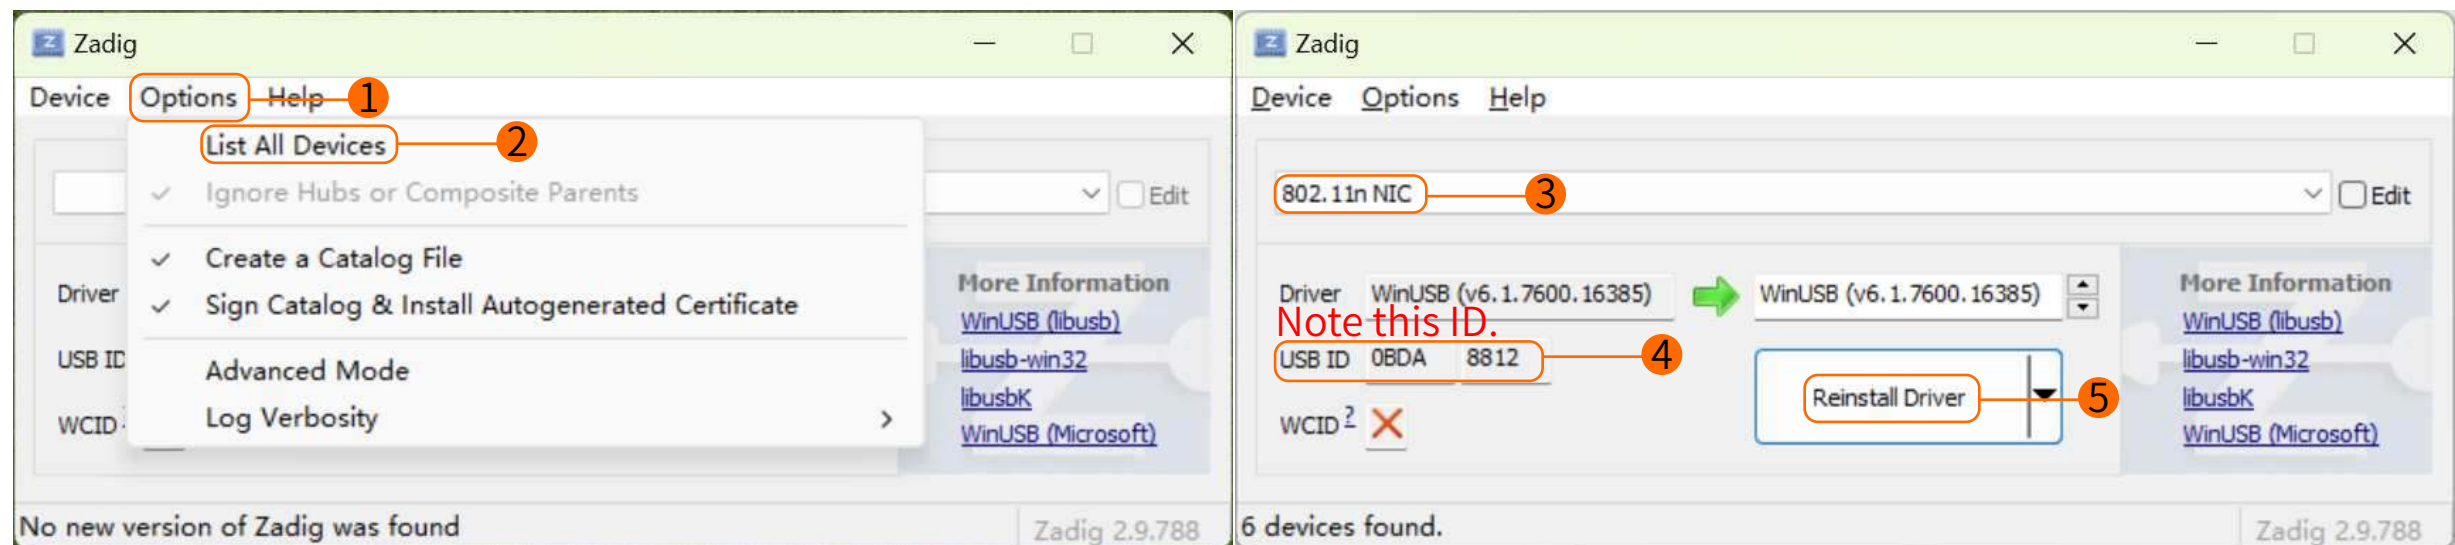

② Step Two

Double-click the fpv4win program, select the network card, Channel, and Codec, then click START to use.

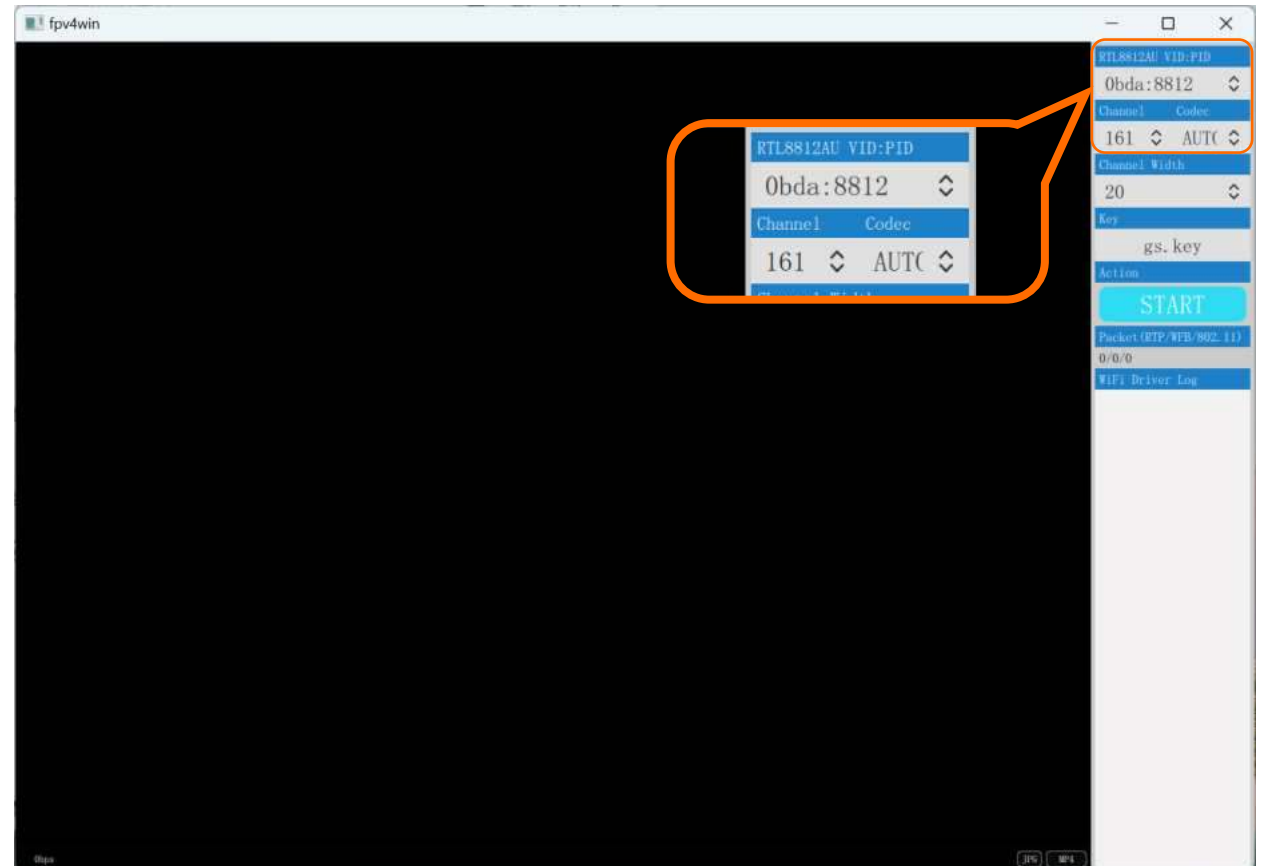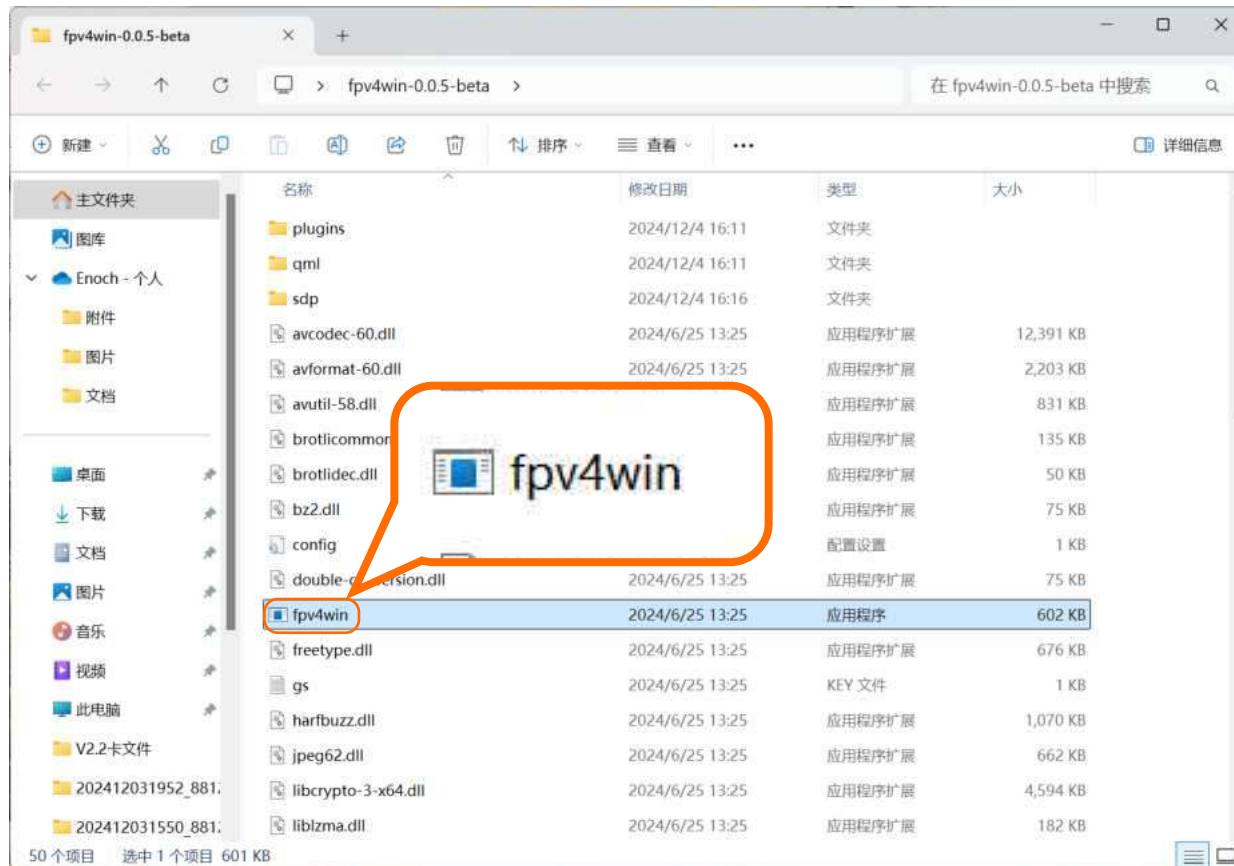

•How to Use with Radxa ZERO 3W

Visit:<https://support.runcam.com/hc/en-us>

Contact our technical support team for detailed guidance.


•What to Do if There Is No Display

Check if the power supply is normal and verify that the Channel and Codec settings are correct.

•What to Do if FC OSD Information Is Missing

①Check Configuration

Verify that the configuration settings are correct. The three parameters should be: 115 (corresponding to 115200), 0, 1, or 2 (corresponding to Mavlink1 or 2).

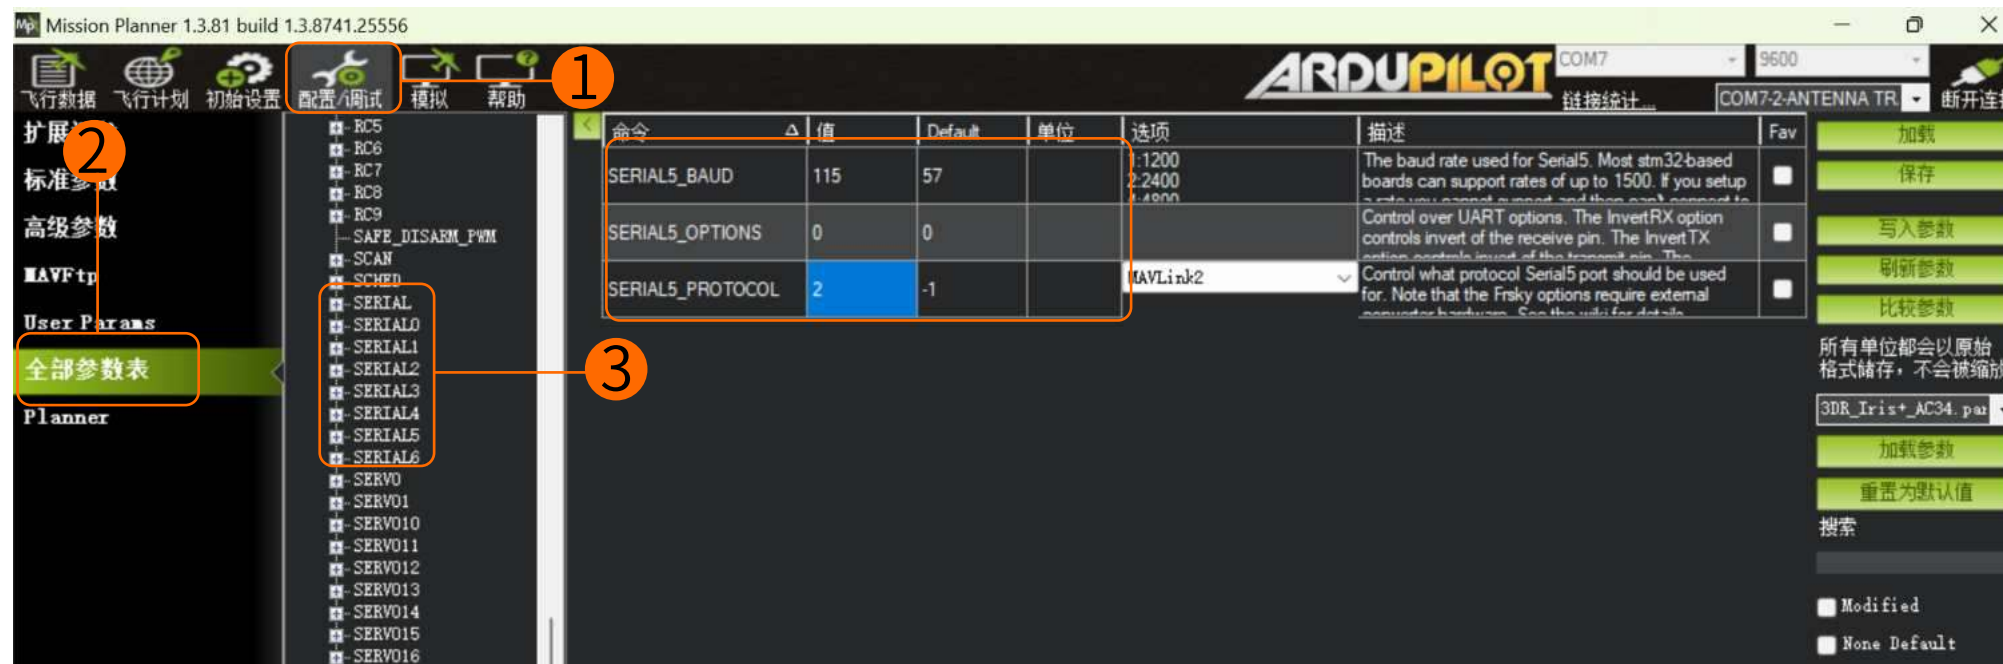

②Check the Serial Port

Confirm that the FC serial port data is normal and available, and the wiring is correct, with TX and RX cross-connected.

Model	WiFiLink 2
Sensor	IMX415
FOV	160°
Resolution	1080P@60FPS/1080P@90FPS/720P@120FPS
Power Supply	9-22V(Max15W)
Lens Module	19*19mm/M12 Lens/MIPI Cable 130mm
Hole Distance	25.5*25.5mm
PCB Size	30.6mm*33mm
Weight	30g (with fan) / 25g (without fan)
Antenna	2dB/IPEX1 (5G)
Power	5.8 GHz: ≤29dBm (FCC), ≤20dBm(CE)