


4 Channels 0/1-10V DMX512 Decoder

Model No.: DL

RDM/Stand-alone function/Linear or logarithmic dimming/Numeric display/Din Rail

Features

- Comply with the DMX512 standard protocols.
- Digital numeric display, set DMX decode start address by buttons.
- RDM function can realize intercommunication between DMX master and decoder. For example, DMX decoder address can be set by DMX master console.
- 1/2/4 DMX channel output selectable.
- 0-10V or 1-10V output selectable.
- Logarithmic or linear dimming curve selectable.
- Stand-alone RGB/RGBW mode and 4 channel dimmer mode selectable, which be controlled by buttons with built-in programs, instead of DMX signal.
- Available in white or black.

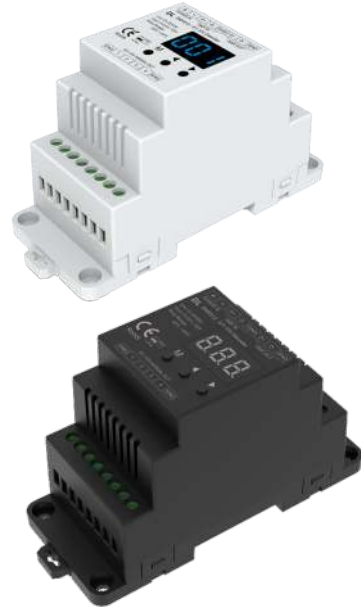

CE RoHS LVD

Technical Parameters

| Input and Output | |
|------------------|----------------|
| Input voltage | 12-24VDC |
| Input signal | DMX512 |
| Output signal | 0/1-10V analog |
| Output current | 4CH, 20mA/CH |



| Environment | |
|-------------------------|-------------------|
| Operation temperature | Ta: -30°C ~ +55°C |
| Case temperature (Max.) | Tc: +65°C |
| IP rating | IP20 |

| Warranty and Protection | |
|-------------------------|------------------|
| Warranty | 5 years |
| Protection | Reverse Polarity |


| Safety and EMC | |
|----------------------|---|
| EMC standard (EMC) | ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4 |
| Safety standard(LVD) | EN 62368-1:2020+A11:2020 |
| Certification | CE, EMC, LVD |

| Weight | |
|--------------|---------|
| Net weight | 0.102kg |
| Gross weight | 0.132kg |

Mechanical Structures and Installations

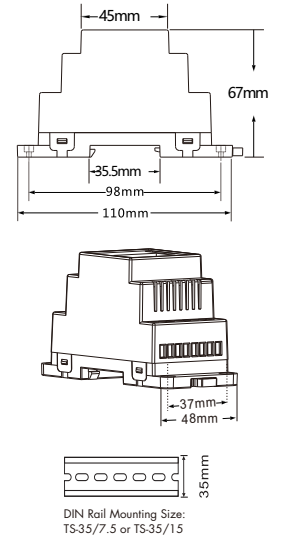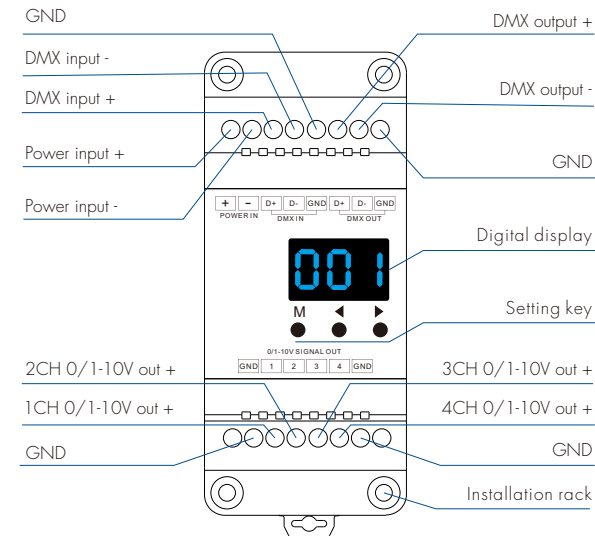

Wiring Diagram

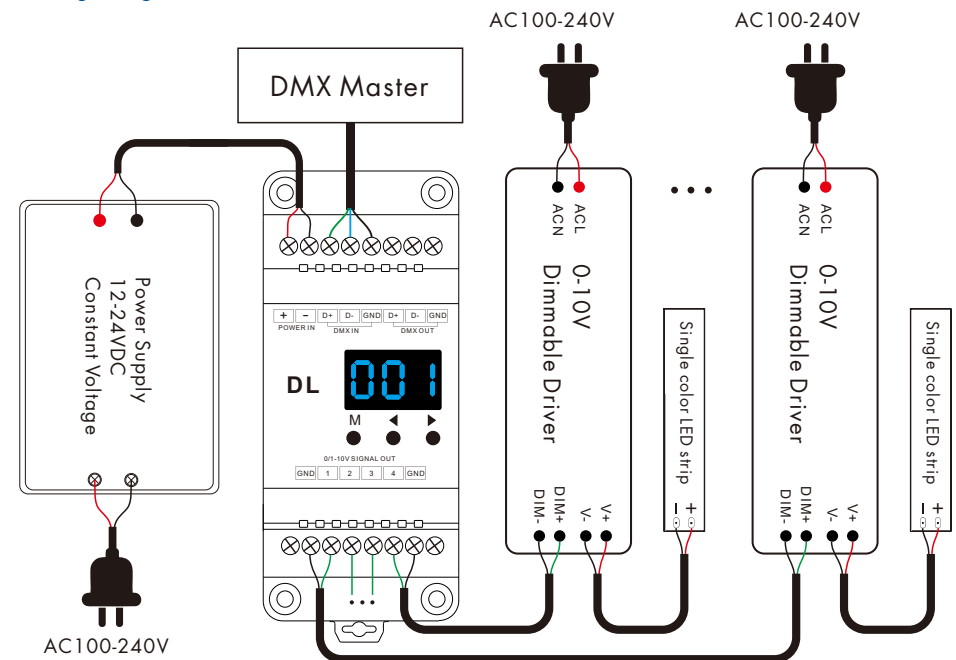

Note: We recommend the number of LED drivers connected to 0/1-10V dimmer (each channel) does not exceed 20 pieces. The maximum length of the wires from dimmer to LED driver should be no more than 30 meters.

Operation

System parameter setting

- Long press M and ◀ key for 2s, prepare for setup system parameter: decode mode, 0/1-10V output, output brightness curve, default output level, automatic blank screen. short press M key to switch five item.
- Decode mode: short press ◀ or ▶ key to switch one-channel decode("d-1"), two-channel decode("d-2") or four-channel decode("d-4"). When set as 1 channel decode, the decoder occupy only 1 DMX address, and four channel output the same brightness of this DMX address.
- 0/1-10V output: short press ◀ or ▶ key to switch 0-10V("0-0") or 1-10V("1-0").
- Output brightness curve: short press ◀ or ▶ key to switch linear curve("C-L") or logarithmic curve("C-E").
- Default output level: press ◀ or ▶ key to change default 0-100% level ("d00" to "dFF") when no DMX input signal.
- Automatic blank screen: short press ◀ or ▶ key to switch enable ("bon") or disable("bof") automatic blank screen.
- Long press M key for 2s or timeout 10s, quit system parameter setting.

DMX mode

- Short press M key, when display 001~512, enter DMX mode.
- Press ◀ or ▶ key to change DMX decode address(001~512), long press for fast adjustment.
- If there is a DMX signal input, will enter DMX mode automatically.
- DMX Dimming: Each DL DMX decoder occupy 4 DMX address when connecting the DMX console. For example, the defaulted start address is 1, their corresponding relationship in the form:



DMX mode
(001~512)

| DMX Console | DMX Decoder Output |
|-------------|--------------------|
| CH1 0-255 | CH1 0-10V |
| CH2 0-255 | CH2 0-10V |
| CH3 0-255 | CH3 0-10V |
| CH4 0-255 | CH4 0-10V |

Stand-alone RGB/RGBW mode

- Short press M key, when display P01~P24, enter stand-alone RGB/RGBW mode.
- Press ◀ or ▶ key to change dynamic mode number(P01~P24).
- Each mode can adjust speed and brightness. Long press M key for 2s, prepare for setup mode speed, brightness, W channel brightness. Short press M key to switch three item. Press ◀ or ▶ key to setup value of each item. Mode speed: 1-10 level speed(S-1, S-9, S-F). Mode brightness: 1-10 level brightness(b-1, b-9, b-F). W channel brightness: 0-255 level brightness(400-4FF). Long press M key for 2s, or timeout 10s, quit setting.
- Enter stand-alone RGB/RGBW mode only when DMX signal is disconnected or lost.



Stand-alone RGB/RGBW mode
(P01~P24)



Speed (8 level) Brightness (10 level, 100%)

RGB change mode list

| No. | Name | No. | Name | No. | Name |
|-----|---------------|-----|-----------------------|-----|---------------------------|
| P01 | Static red | P09 | 7 color jump | P17 | Blue purple smooth |
| P02 | Static green | P10 | Red fade in and out | P18 | Blue white smooth |
| P03 | Static blue | P11 | Green fade in and out | P19 | RGB+W smooth |
| P04 | Static yellow | P12 | Blue fade in and out | P20 | RGBW smooth |
| P05 | Static cyan | P13 | White fade in and out | P21 | RGBY smooth |
| P06 | Static purple | P14 | RGBW fade in and out | P22 | Yellow cyan purple smooth |
| P07 | Static white | P15 | Red yellow smooth | P23 | RGB smooth |
| P08 | RGB jump | P16 | Green cyan smooth | P24 | 6 color smooth |

Stand-alone dimmer mode

- Short press M key, when display L-1~L-8, enter stand-alone dimmer mode.
- Press ◀ or ▶ key to change dimmer mode number(L-1~L-8).
- Each dimmer mode can adjust each channel brightness independently. Long press M key for 2s, prepare for setup four channel brightness. Short press M key to switch four channel(100~1FF, 200~2FF, 300~3FF, 400~4FF). Press ◀ or ▶ key to setup brightness value of each channel. Long press M key for 2s, or timeout 10s, quit setting.
- Enter stand-alone dimmer mode only when DMX signal is disconnected or lost.




Stand-alone dimmer mode
(L-1~L-8)

Restore factory default parameter


- Long press ◀ and ▶ key for 2s, restore factory default parameter, display "RES".
- Factory default parameter: DMX decode mode, DMX decode start address is 1, four channel decode, 0-10V output, linear brightness curve, output 100% level when no DMX input, RGB mode number is 1, dimmer mode number is 1, disable automatic blank screen.

Dimming curve setting

Linear dimming curve

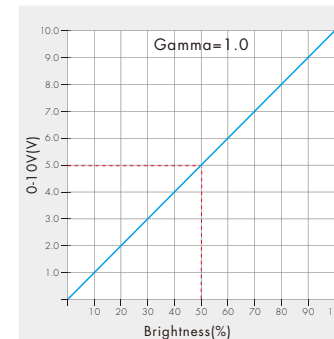

Logarithmic dimming curve

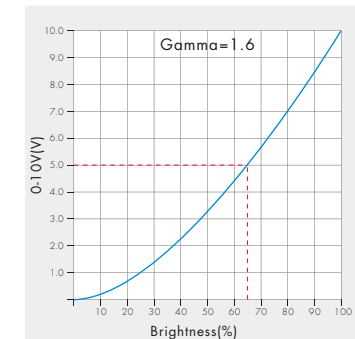

Malfunctions analysis & troubleshooting

| Malfunctions | Causes | Troubleshooting |
|--------------|--|--|
| No light | 1. No power. 2. Wrong connection or insecure. | 1. Check the power. 2. Check the connection. |
| Wrong color | 1. Wrong connection of 0-10V output wires. 2. DMX decode address error. | 1. Reconnect 0-10V output wires. 2. Set correct decode address. |